

## WWW.CHROMEHOOVES.NET

## GLOSSARY

## A

- A & F: Arming and fuzing.  
AFS: Arming and fuzing safety.  
AGE: Aerospace ground equipment (ground support equipment and maintenance ground equipment).

## C

- CONT: Continuity.

## D

- Demating: Removing re-entry vehicle from Stage II.

## E

- EOD: Emergency ordnance disposal.

## F

- FCS: Flight Control System.

## WWW.CHROMEHOOVES.NET

## G

- GOE: Ground support equipment.

## I

- IDENT: Identification.

## M

- Mating: Installing re-entry vehicle on Stage II.

- MCCC: Missile Combat Crew Commander.

## R

- R/V: Re-entry vehicle.

## S

- S & I: Surveillance and inspection.

## W

- W/H: Warhead.

- W/R: War-ready.

## WWW.CHROMEHOOVES.NET

ALPHABETICAL INDEX

WWW.CHROMEHOOVES.NET

\*Denotes figure number

Paragraph

A

A&F Safety Fault.....5-3

AGE Assembly  
 Installation.....\*4-10, 4-64  
 Removal.....\*4-10, 4-64

C

Checkout  
 Checkout Mode.....\*2-7, 2-18  
 Installed R/V.....\*2-4, 2-12  
 Interface Test Set Self-Test.....\*2-1, 2-5  
 Premating.....\*2-3, 2-10  
 Readiness.....\*2-6, 2-16  
 System.....\*2-5, 2-14

Crane  
 MC-1, Positioning.....\*4-3, 4-8  
 Missile Handling, Positioning.....4-6

E

WWW.CHROMEHOOVES.NET

Emergency Procedures  
 A&F Safety Fault.....5-3  
 Re-Entry Vehicle Recovery .....5-5  
 Warhead Safety Fault.....5-3

F

Fault A&F  
 A&F Safety.....5-3  
 Warhead Safety.....5-3

I

Indicator Lamp  
 Installation.....\*4-11, 4-66  
 Removal.....\*4-11, 4-66

Installation  
 AGE Assembly.....\*4-10, 4-64  
 Indicator Lamp.....\*4-11, 4-66  
 Re-entry Vehicle.....\*4-7, \*4-8, \*4-9, 4-35  
 Re-entry Vehicle Maintenance Stand.....4-12, 4-14

Interface Test Set Self-Test.....\*2-1, 2-5

WWW.CHROMEHOOVES.NET

Paragraph

# WWW.CHROMEHOOVES.NET

## M

Maintenance Stand, R/V	
Assembly . . . . .	4-12, 4-14
Installation .. . . .	4-12, 4-14
Preparation for Transportation . . . . .	4-60
Removal . . . . .	4-54, 4-56
MC-1 Crane Positioning . . . . .	*4-3, 4-8
Missile Handling Crane Positioning . . . . .	4-6

## P

Positioning	
Cranes. . . . .	*4-3, 4-5
R/V Trailer . . . . .	*4-3, 4-16
Premating Checkout . . . . .	*2-3, 2-10

## R

Readiness Checkout . . . . .	*2-6, 2-16
Re-entry Vehicle . . . . .	*2-4, 2-12
Checkout of installed . . . . .	*2-4, 2-12
Emergency Procedures . . . . .	5-1
Installation . . . . .	*4-7, *4-8, *4-9, 4-35
Removal . . . . .	*4-4, *4-5, *4-6, 4-18
Warhead Circuits Test . . . . .	2-3, 4-21

Removal	
AGE Assembly . . . . .	*4-10, 4-64
Indicator Lamp . . . . .	*4-11, 4-66
Re-entry Vehicle . . . . .	*4-4, *4-5, *4-6, 4-18
Re-entry Vehicle Maintenance Stand . . . . .	4-54, 4-56

## S

Safety Fault	
A&F . . . . .	5-3
Warhead . . . . .	5-3
Safety Precautions . . . . .	*1-1, 1-1
Self-Test, Interface Test Set . . . . .	*2-1, 2-5
Special Tools. . . . .	*4-2, 4-3
System Checkout . . . . .	*2-5, 2-14

# WWW.CHROMEHOOVES.NET

T

WWW.CHROMEHOOVES.NET

Test	
Equipment . . . . .	*4-1, 4-3
Warhead Circuits . . . . .	2-3, 4-21
Test Equipment . . . . .	*4-1, 4-3
Trailer, R/V	
Positioning. . . . .	*4-3, 4-16
Preparing for Transportation . . . . .	4-62
Trouble Analysis . . . . .	3-1

W

Warhead Circuits Test . . . . .	2-3, 4-21
Warhead Safety Fault . . . . .	5-3

WWW.CHROMEHOOVES.NET

WWW.CHROMEHOOVES.NET